







Security system SAFE HOME Csk 800 HF


Arming « TOTAL MODE »

1. Press the button  .
And enter your secret code about 4 digits.
 - or
 2. Press the button  .
And move the tag in front of the keypad.
- 

Arming « Partiel MODE »




1. Press the button  .
And enter your secret code about 4 digits.
 - or
 2. Press the button  .
And move the tag in front of the keypad.
- 

Disarming the system

1. Enter your secret code about 4 digits.
 - or
 2. Move the tag in front of the keypad.
- 

Security system SAFE HOME Csk 800 HF

Changing codes

 and 	Master code	User number (1 to 9)	New Code (4 Digits)	New Code (4 Digits)		New Code (4 Digits)
Red light blinking	Red light blinking	Long beep	Long beep	Long beep	Long beep	test

Adjust arming/disarming beep sound level

 et 			Choose level 0 to 7
--	---	---	---------------------

0 = no sound.
The siren gives out a beep with the correct level.

