

The LEDs of the control panel show the status of your security system.



LED indicator «AC mains power»

On: The Control Panel is supplied from the mains.

Off : The Control Panel is out of service and the battery is low.

Flashing: There is a mains power failure - The Control panel is supplied by built-in battery.

LED indicator «System Armed»

On: The system total set is armed.

Off : The system is disarmed.

Flashing: The system part or annex set is armed.

LED indicator «Detector Activated»

Flashing: It means that one of the window or door protected by a magnetic contact is opened. It flashes until the window or door has been closed.

LED indicator «Alarm Memory»

On: It means that an intruder alarm occurred while the system was armed.

Flashing: It means that an alarm occurred while the part set or annex set was armed. The indicator remains ON until the next arming.

LED indicator «Technical Fault»

On: It indicates a fault on a technical channel.

Flashing: It indicates a fault on the system. (Battery fault, Supervision, Tamper, Phone line failure or Radio jamming).

The indicator remains ON or FLASHING until the condition has been cleared.